


Cable Modem Swapping Instructions

Wired Modem

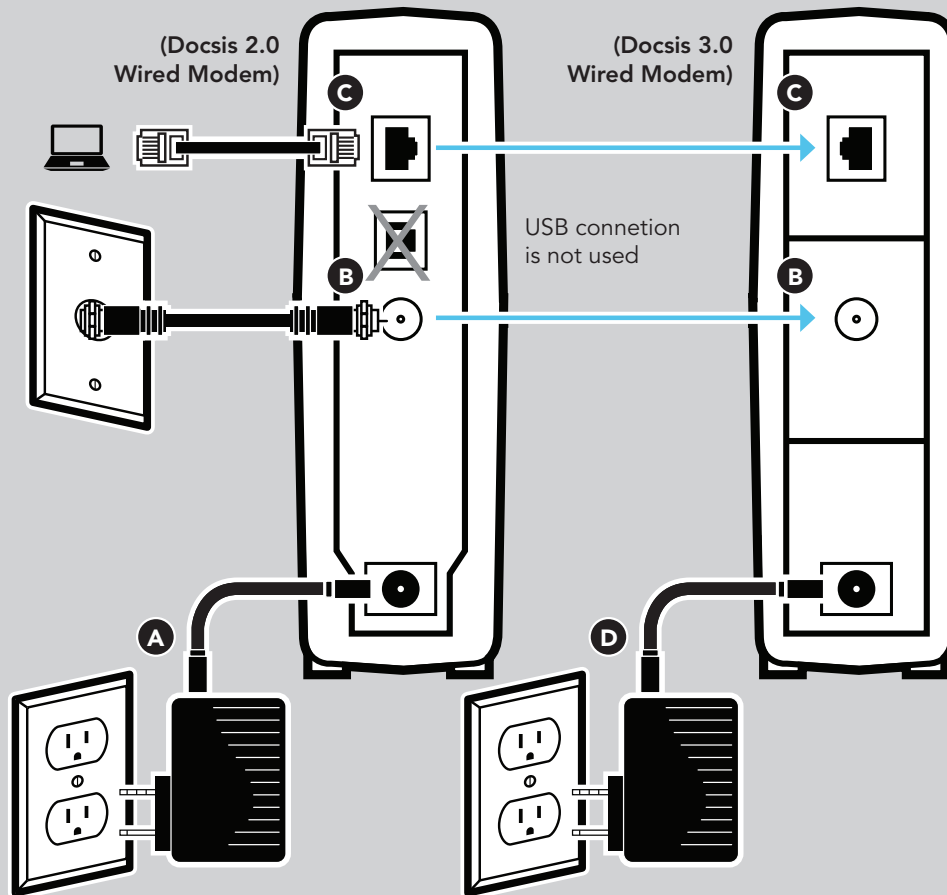

- 1** Disconnect the power cord **A** from the electrical outlet **AND** from your existing modem.
- 2** Disconnect the coax cable **B** from the existing modem and connect it to the cable port on your new equipment.
- 3** Disconnect the Ethernet line **C** from the existing modem and plug it into the Ethernet port on your new modem.
- 4** Connect the **NEW POWER CORD D** to the electrical outlet and your new modem.

- 5** After steps 1-4 are complete, power up your modem.
- 6** Once lights are on modem, launch browser and review the acceptable use policy and follow any instructions.
- 7** Restart modem and start surfing!